

ProPac Military Style Cots Easy Setup Guide


ProPac military style cots have sleeping mats that are stretched nice and tight to maximize comfort. This requires a snug fit for the end-rails, so we've included some tips for quick and easy setup.



- 1.** Remove cot and end-rails from bag.
- 2.** Fold out legs, pull side-rails apart and place cot on floor. Slide one end-rail into pocket along end of sleeping mat.



- 3.** Attach one end-rail by aligning slots in this part with round tabs on side-rails and press into place.

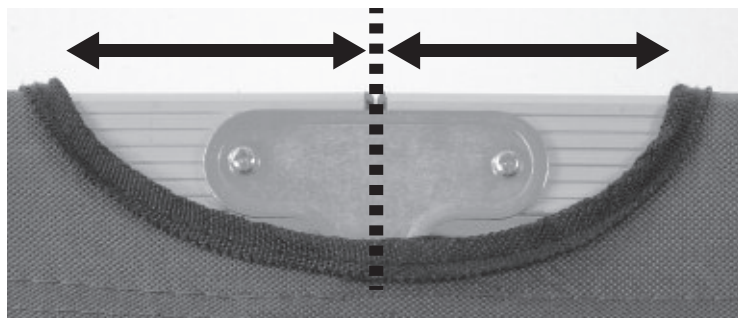

- 4.** Make sure the sleeping mat is centered lengthwise on the side-rails before attaching the second end-rail.

There are two methods for attaching the second rail.

Method A: Place end-rail against side-rail ends, aligning slots on end-rail with round tabs on both




side-rails. This will form a lever, allowing you to use a twisting motion to secure end-rail on both ends.

Method B: Place one slot of end-rail onto round tab. Then use an end-rail from another cot as a lever to stretch mat enough to attach second end-rail.



stretch mat enough to attach second end-rail.

You're ready for a good night's rest.

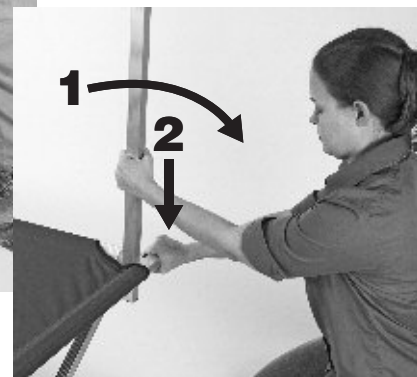

**Purchase ProPac cots online at
CotKing.com**

Know us before you need us.™ 
1-800-345-3036